Master Irrigation Module

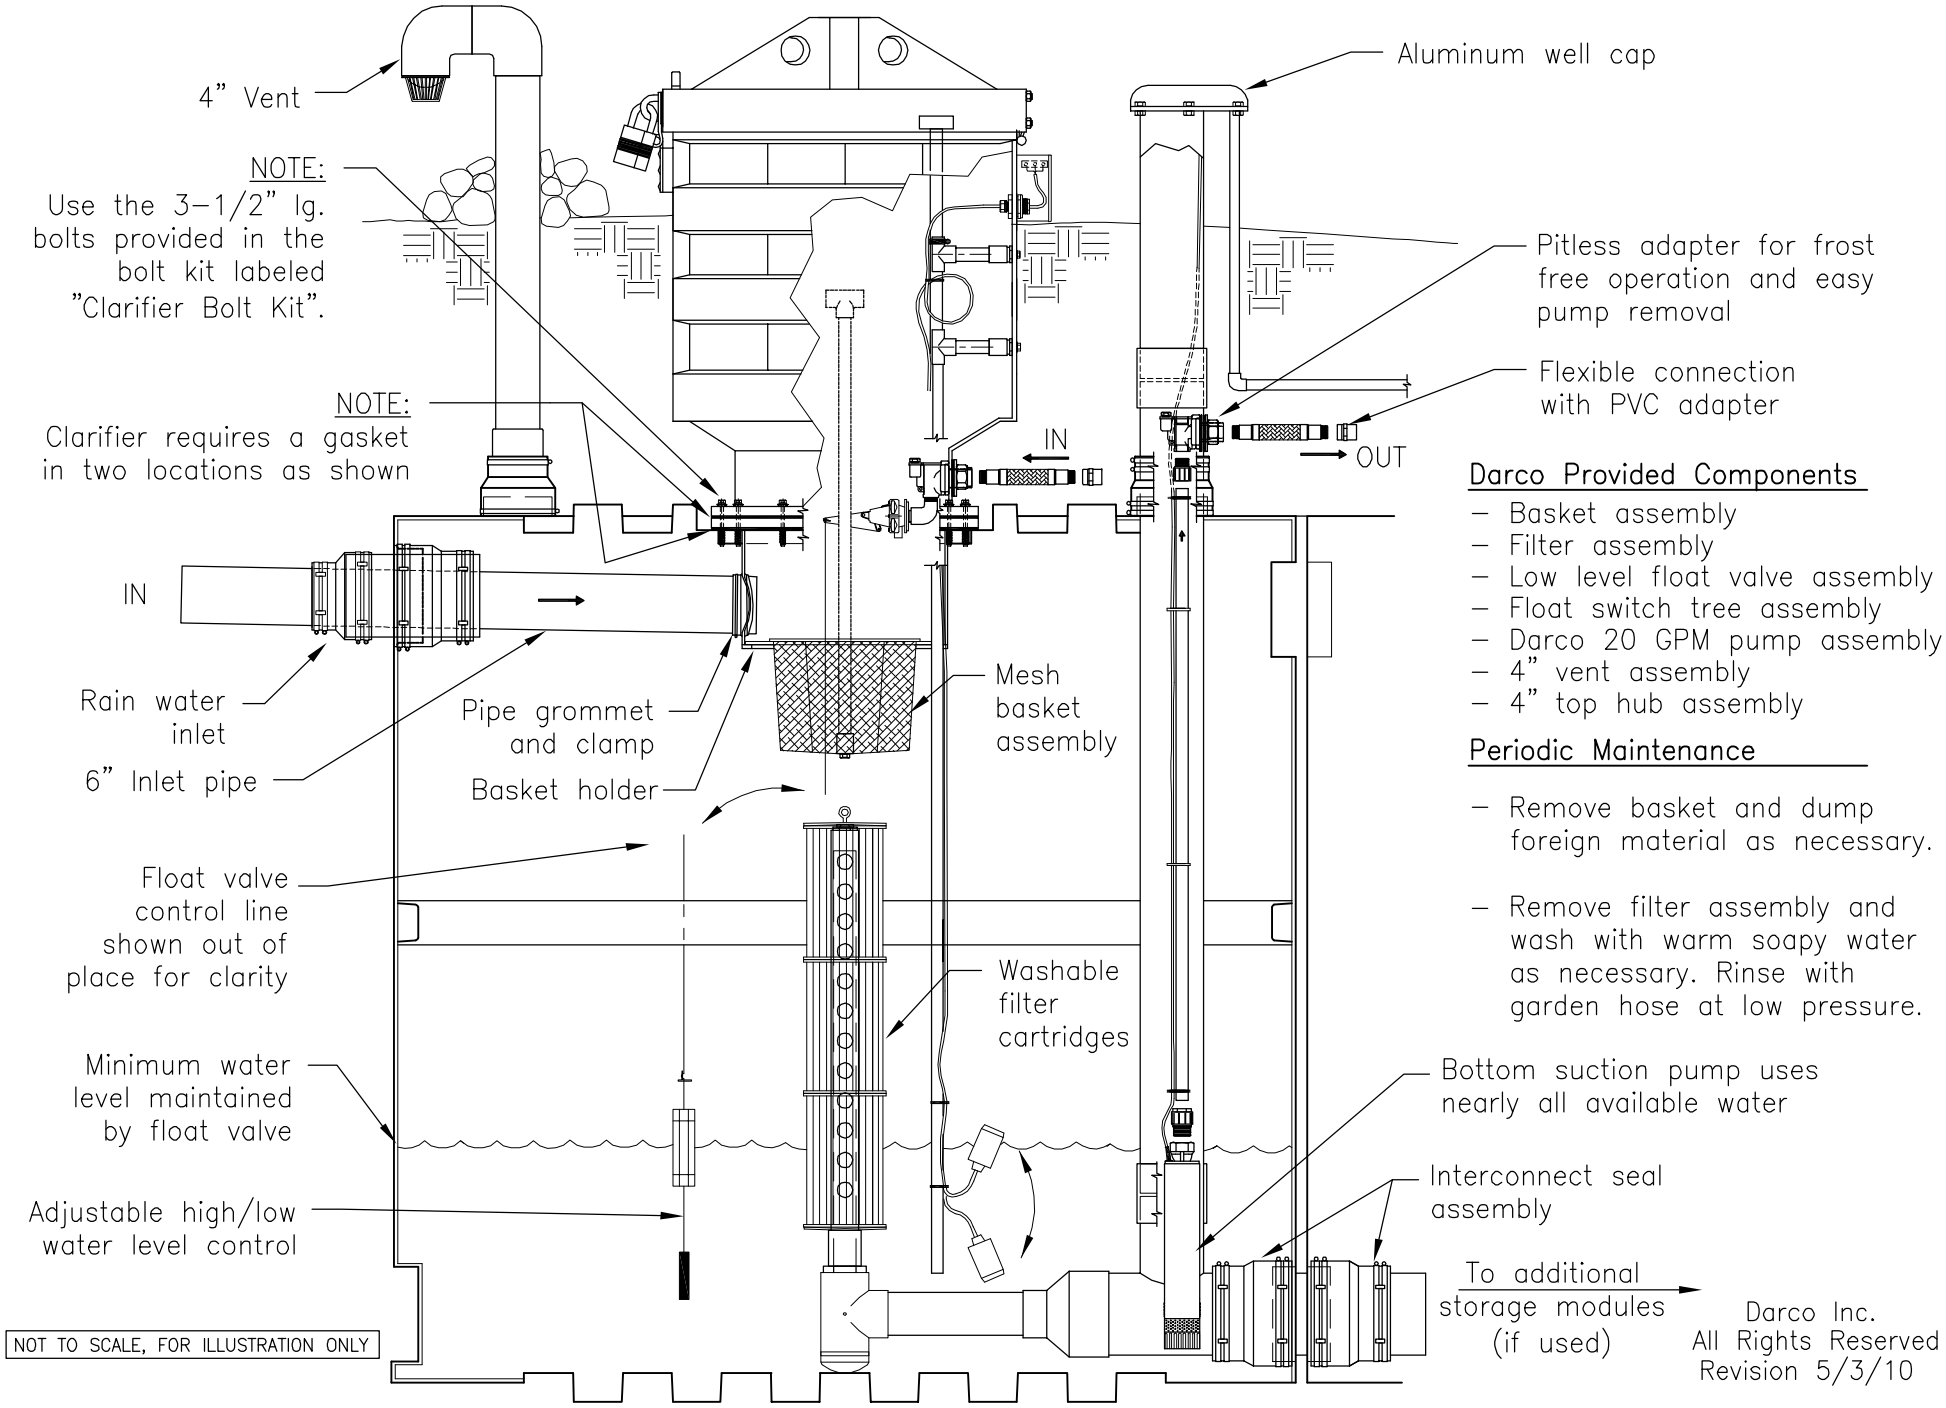

Darco Provided Components

- Basket assembly
- Filter assembly
- Low level float valve assembly
- Float switch tree assembly
- Darco 20 GPM pump assembly
- 4" vent assembly
- 4" top hub assembly

Periodic Maintenance

- Remove basket and dump foreign material as necessary.
- Remove filter assembly and wash with warm soapy water as necessary. Rinse with garden hose at low pressure.

Darco Inc.
All Rights Reserved
Revision 5/3/10